

Bircher Reglomat PrimeTec Sensor Wiring Diagram for Besam UniSlide Door Operator

6-Wire Connection: Recommended option (enhanced performance through separate motion & safety outputs)


Other options available - please see PrimeTec manual or contact Bircher Reglomat for assistance.



PrimeTec Sensor must be programmed for this wiring configuration.

Press & hold the **black** value button for **8 seconds** to separate motion & safety outputs.

For more details, please refer to PrimeTec manual.

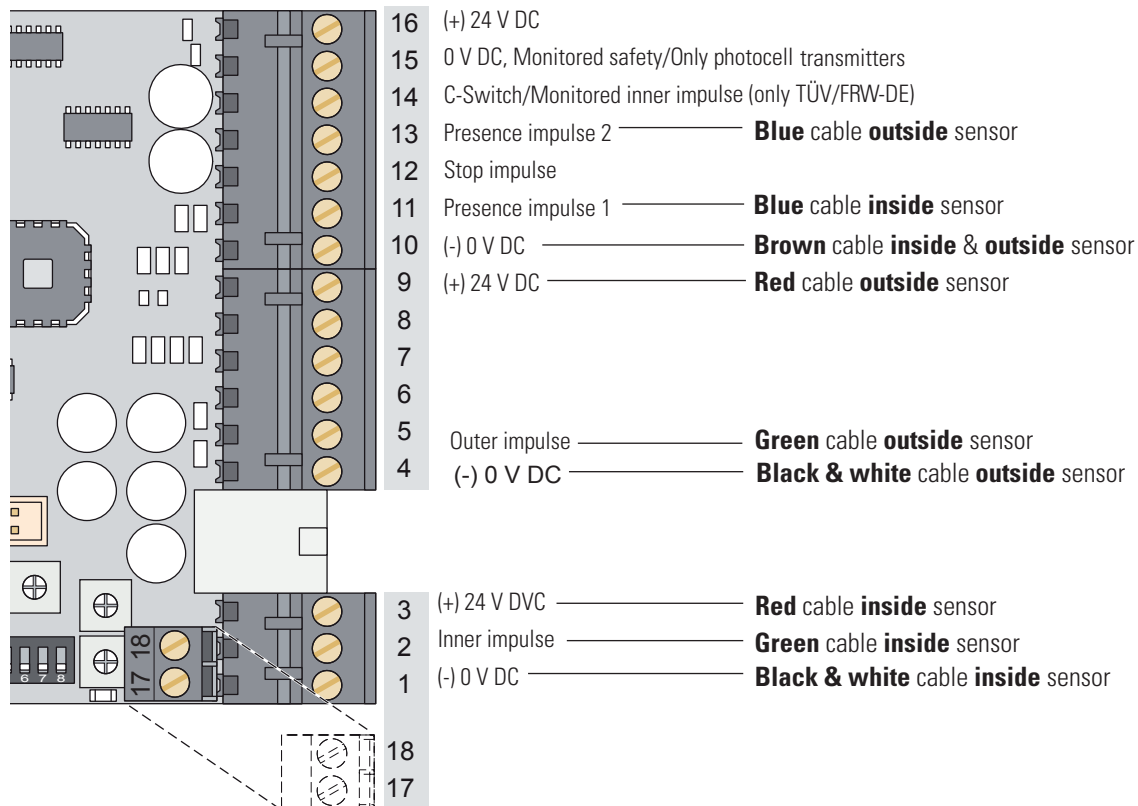

Bircher Reglomat
870 Pratt Ave N
Schaumburg, IL 60193
847-952-3730
www.bircherreglomat.com
sales@bircherreglomat.com